




igus® E-ChainSystems®

Phone +49- (0) 22 03-96 49-800
 Fax +49- (0) 22 03-96 49-222

igus® GmbH
 51147 Cologne

Internet: www.igus.eu
 E-mail: info@igus.de

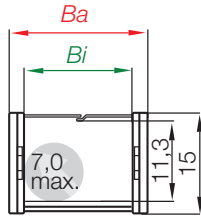


Series E065 - split crossbar along the outer radius

Part No.	Bi [mm]	Ba [mm]	R [mm] Bending radii	Weight [kg/m]
E065.16. <input type="text"/> .0	16	24,8	<input type="text" value="018"/> <input type="text" value="028"/> <input type="text" value="038"/>	≈ 0,17

Supplement Part No. with required radius. Example: E065.16. .0

0 = standard color, other colors ▶ page 1.39 · Pitch = 15 mm/link - Links/m = 67

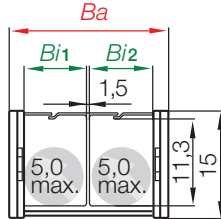


Series E065 - split crossbar along the outer radius with 2-chamber system

Part No.	Bi [mm]	Ba [mm]	R [mm] Bending radii	Weight [kg/m]
E065.2/9. <input type="text"/> .0	9 / 9	29,3	<input type="text" value="018"/> <input type="text" value="028"/> <input type="text" value="038"/>	≈ 0,19

Supplement Part No. with required radius. Example: E065.2/9. .0

0 = standard color, other colors ▶ page 1.39 · Pitch = 15 mm/link - Links/m = 67

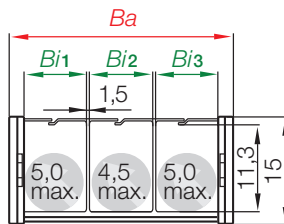


Series E065 - split crossbar along the outer radius with 3-chamber system

Part No.	Bi [mm]	Ba [mm]	R [mm] Bending radii	Weight [kg/m]
E065.3/9. <input type="text"/> .0	9 / 9 / 9	39,3	<input type="text" value="018"/> <input type="text" value="028"/> <input type="text" value="038"/>	≈ 0,22

Supplement Part No. with required radius. Example: E065.3/9. .0

0 = standard color, other colors ▶ page 1.39 · Pitch = 15 mm/link - Links/m = 67

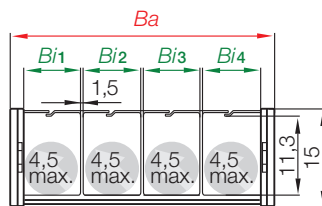

Series E065 - split crossbar along the outer radius with 4-chamber system

Part No.	Bi [mm]	Ba [mm]	R [mm] Bending radii	Weight [kg/m]
E065.4/9. <input type="text"/> .0	9 / 9 / 9 / 9	49,3	<input type="text" value="018"/> <input type="text" value="028"/> <input type="text" value="038"/>	≈ 0,25

Supplement Part No. with required radius. Example: E065.4/9. .0

0 = standard color, other colors ▶ page 1.39 · Pitch = 15 mm/link - Links/m = 67



Part No. structure

